

# SPARCbook™ Technical Reference

## Configuring 2.x OS for Auto-Answer Login/Dialout capabilities

1. Open a OPENWIN session and become the super user.
2. Launch a shell tool and tip the modem via the **tip modem** command.
3. Enter the following string once connected: **at&D3&R0&S1&C1&W0**

This will write the above settings to your default profile 0 and exit the tip command.

4. If **NCE** is not running, launch the **NCE** control panel.
5. Select the Modem applet and modify it as follows and apply it:

[View Screen](#)

6. Close the **NCE** if so desired.
7. From a command/shell tool launch the admintool by typing **admintool**.
8. Select the Serial Port Manager applet.
9. Select **Port c** and right mouse click the **edit** button and select "**Modify Service...**"

The Serial Port Manager: Modify Service will open.

10. Select **Expert** beside the Detail selection.
11. Make the following Selections to match this entry.

[View Screen](#)

12. Apply this once everything matches.

The admintool can be closed and the system will need to be rebooted.

Once rebooted, you can now dial in/out on the modem and have a login running.