



Part Number: 27L2659

**ThinkPad 380Z**

**Quick Reference and Service Information**

Your name: \_\_\_\_\_

Company name: \_\_\_\_\_

Model number: \_\_\_\_\_

Serial number: \_\_\_\_\_



Company or reseller service: \_\_\_\_\_

IBM service Web site: \_\_\_\_\_

IBM service number: \_\_\_\_\_

*Notes:*

## Locations

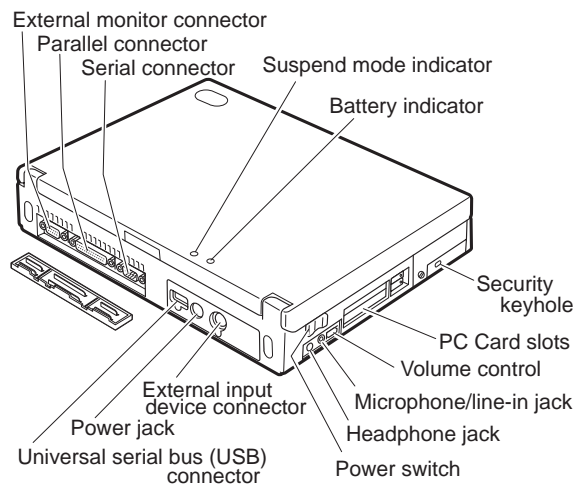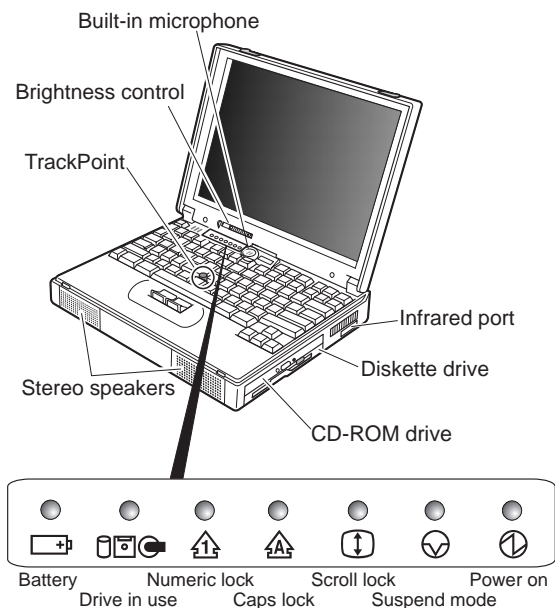

## System-Status Indicators

Symbol	Color	Meaning
Battery	Green	Enough battery power remains for operation.
	Orange	The battery pack is being charged.
	Blinking orange	The battery pack needs to be charged.
Drive in use	Orange	Data is being read from or written to the hard disk, the diskette drive, or the CD-ROM drive.
Numeric lock	Green	The numeric keypad on the keyboard is enabled.
Caps lock	Green	Caps Lock mode is enabled.
Scroll lock	Green	Scroll Lock mode is enabled.
Suspend mode	Green	The computer is in suspend mode.
	Blinking green	The computer is entering suspend mode or hibernation mode, or is resuming normal operation.
Power on	Green	The computer is operational.

For more information ➡ *User's Reference.*

## Function Keys

Fn +	Result
<b>F2</b>	Show or hide the window for the battery power status.
<b>F3</b>	Enter standby mode.
<b>F4</b>	Enter suspend mode.
<b>F7</b>	Change the display output location.
<b>F8</b>	Switch the LCD screen image size between expanded and normal mode.
<b>F11</b>	Change the processor speed.
<b>F12</b>	Enter hibernation mode.

---

## Getting Service

Always read the “Solving Computer Problems” chapter of your *User's Reference* before calling IBM.

During the warranty period, you can get help and information from International Warranty Service (IWS) in your country. Before you call, fill out the front of this card. Also have:

- The exact wording of any error messages
- Hardware and software configuration information
- A description of the problem
- Information and serial numbers of any options installed on your system

## International Warranty Service Information

This IBM product is eligible for IWS wherever your machine type is sold by IBM. Your computer must be registered to receive international service. To register, call one of the following IWS offices:

Southeast Asia, Australia, New Zealand, and Hong Kong:	61-2-9354-4171
Canada, Latin America, and the U.S.:	1-800-497-7426
Europe, Middle East, and Africa:	44-1475-893638
Japan, Korea, China (except Hong Kong), and Taiwan:	81-462-73-7598

## Help through a ThinkPad Web Site

The latest information about ThinkPad computers:

➔ <http://www.ibm.com/thinkpad>

Technical support information:

➔ <http://www.ibm.com/support>

---

## ThinkPad Configuration Program

You can customize your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, double-click on the **ThinkPad** icon at the bottom right of the screen.



For more information, click on the **Help** button



**TrackPoint Setting:** You can customize such TrackPoint functions as **Press-to-Select** and **Sensitivity**.

Click on the **TrackPoint** button (  ).

---

## Battery Status

You can monitor the battery status with the Fuel-Gauge program. To start the Fuel-Gauge program, click on **Start** and move the cursor to **ThinkPad**; then click on **Fuel-Gauge**.

---

## For Further Information

You can find the following information in your ThinkPad user's manuals.

User's Reference	Online User's Guide
Getting familiar with your computer	Using your computer outside your home country
Extending the features of your computer	Using the audio feature
Protecting your computer	Using your computer with a battery pack
Solving computer problems	Using your computer with a PC Card
Getting service	Frequently asked questions
Features and specifications	Installing software
	Using system management
	Using PS2 commands
<b>Note:</b> To see the <i>Online User's Guide</i> , click on <b>Start</b> and move the cursor to <b>Programs</b> and <b>ThinkPad 380</b> ; then click on <i>ThinkPad 380 User's Guide</i> .	