



N°	Toshiba PN	Description
1	P000249540	PCB FLISY2
1-1	P000263170	PCB FLISY3
2	P000249550	PCB FLIMC2
10	P000249560	COLOR LCD MODULE
1-10	P000258270	COLOR LCD MODULE
11	P000249570	FL INVERTER
12	P000250550	HDD UNIT (2.1GB)
1-12	P000256520	HDD UNIT (2.1GB)
13	P000246000	KEYBOARD UNIT
14	P000250310	POINTING DEVICE
15	P000250680	STICK CAP SET
16	PA2502UR	MAIN BATTERY PACK
16-A	PA2503UR	HIGH CAPACITY BATTERY
17	P000237040	NI-MH BATTERY
18	P000182200	AC CORD SET
19	P000250320	FPC HARNESS
19A	P000250690	LCD INNER DUCT

19B	P000250700	LCD OUTER DUCT
20	P000250330	SPEAKER
21	P000249590	PCB FLIIO2
22	P000249700	BASE ASSEMBLY, I/O
22A	P000237100	BOTTOM CUSHION
23	P000249710	TOP COVER, I/O
24	PA2501U	UNIVERSAL AC ADAPTER
40	P000249600	BASE ASSEMBLY
40A	P000250060	BATTERY LOCK
40B	P000250070	EJECT BUTTON
40C	P000250080	EJECT ARM
40D	P000242770	FIR COVER
40E	P000250090	BATTERY SPRING
40F	P000237150	BOTTOM CUSHION
41	P000249610	COVER ASSEMBLY
41A	P000250100	MICROPHONE HOLDER
41B	P000250110	BOSS PLATE
41C	P000250120	HINGE COVER
41D	P000250130	BRAKE HINGE
41E	P000250140	MICROPHONE
41F	P000250150	INSULATOR, HINGE LOWER
42	P000250160	LCD COVER ASSEMBLY
42A	P000237230	LCD LATCH, RIGHT
42B	P000237240	LCD LATCH, LEFT
42C	P000250170	LATCH SPRING
43	P000250180	LCD MASK ASSEMBLY
43A	P000250190	POWER SWITCH BUTTON
43B	P000250200	POWER SWITCH SPRING
43C	P000202500	LCD CUSHION
44	P000246100	HDD EJECT
44-A	P000256540	HDD EJECT
45	P000250210	KEYBOARD EARTH ASSEMBLY
46	P000250230	KEYBOARD HOLDER
47	P000250240	HDD COVER
48	P000250250	SPEAKER HOLDER
49	P000237410	DUMMY CARD
50	P000250260	INSULATOR, RTC BATTERY
51	P000239030	LCD MASK SEAL
52	P000250270	INSULATOR, HDD LOWER ASSY
52-A	P000256510	INSULATOR, HDD LOWER ASSY
53	P000250280	HDD EARTH PLATE
53-A	P000256500	HDD EARTH PLATE
54	P000250290	INSULATOR, RTC CABLE
55	P000250300	SPEAKER EARTH SPRING
56	P000250710	DUCT, COVER ASSEMBLY
57	Not Available	-
58 (N/S)	P000277140	EMI SHIELD GLASS
101	P000215140	SCREW M2X3C
102	P000239500	SCREW M2X14C
103	P000207950	SCREW M2X4Z
104	P000239510	SCREW M2.5X5Z
107	P000023310	SCREW M2X4
108	P000230440	SCREW M2X5C
109	P000229510	SCREW M2X4L
111	P000207940	SCREW M2X6
113	P000237460	SCREW
OPTIONS		
OP01	KTT-LBT/32	KINGSTON 32MB EDO MEMORY
OP03	PA2719U	ENHANCED PORT REPLICATOR
OP04	PA2501U	UNIVERSAL AC ADAPTER
OP05	PA2502UR	MAIN BATTERY PACK
OP06	PA2503UR	HIGH CAPACITY BATTERY
OP07	PA2940U	FLOPPY DISK DRIVE KIT
OP08	PA2499U	BATTERY CHARGER
OP10	PA2504U	ADAPTER, BATTERY CHARGER