

# Technical Note

**TITLE:** Password delete methods - Toshiba systems

**DATE:** 06/20/96

**PRODUCT FIELDS:** All Computers / Other  
Other

---

Toshiba America Information Systems, Inc. has done its best to ensure the accuracy of this information. Toshiba America Information Systems, Inc. reserves the right to revise or make obsolete some or all of the contents without obligation to notify any person of such revisions or changes. Despite every effort to the contrary, errors, omissions or discrepancies may have occurred in preparation of this document and Toshiba America Information Systems, Inc. assumes no liability for damages incurred due in part or in whole to such errors.

---

## INFORMATION:

### HOW TO DELETE THE PASSWORD ON TOSHIBA PORTABLE & NOTEBOOK COMPUTERS

Computer Model Number	See Note (1)	See Note (2)
100, 110 Series	x	
400, 410, 420 Series	x	
500 Series	x	
610, 650 Series	x	
700, 710, 720 Series	x	
T100 Series	x	
T200 Series	x	
T1800, T1850 Series	x	
T1900, T1910, T1950, T1960 Series	x	
T2100, T2130, T2150 Series	x	
T3300 Series	x	
T3400 Series	x	
T3600 Series	x	
T4400 Series	x	
T6400 Series	x	
T4500 Series		x
T4600 Series		x
T4700 Series		x
T4800, T4850 Series		x
T4900 Series		x
T6600 Series		x

## Notes:

- (1) Use Printer Wraparound Connector (P.N.: C\*D-4890004-A00) on parallel printer port
- (2) Password Deletion Software is required - Ship unit to Toshiba Manufacturing Repair Center (MRC) or Premiere ASPs

If the unit is not listed above, then the password security feature is not available

**Keywords:**

PASSWORD