

VIZIO



QUICK START GUIDE

Model: SB4051-C0

IMPORTANT SAFETY INSTRUCTIONS

Your Unit is designed and manufactured to operate within defined design limits, and misuse may result in electric shock or fire. To prevent your Unit from being damaged, the following rules should be observed for its installation, use, and maintenance. Please read the following safety instructions before operating your Unit. Keep these instructions in a safe place for future reference.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your Unit.
- Unplug the power cord before cleaning your Unit. A damp cloth is sufficient for cleaning. Do not use a liquid or a spray cleaner on your Unit. Do not use abrasive cleaners.
- Always use the accessories recommended by the manufacturer to insure compatibility.
- When moving your Unit from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on your Unit to avoid causing fire, electric shock, or component damage.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your Unit and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your Unit in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your Unit enclosure. Do not place any objects on the top of your Unit. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your Unit.
- When connected to a power outlet, power is always flowing into your Unit. To totally disconnect power, unplug the power cord.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.



- The wall socket should be located near your Unit and be easily accessible
- Keep your Unit away from moisture. Do not expose your Unit to rain or moisture. If water penetrates into your Unit, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use your Unit if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair your unit yourself.
- Avoid using dropped or damaged appliances. If your Unit is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair. Continued use of your Unit may cause fire or electric shock.
- Do not install your Unit in an area with heavy dust or high humidity. Operating your Unit in environments with heavy dust or high humidity may cause fire or electric shock.
- Ensure that the power cord and any other cables are unplugged before moving your Unit.
- When unplugging your Unit, hold the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When your Unit will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert the remote control batteries in accordance with instructions. Incorrect polarity may cause the battery to leak which can damage the remote control or injure the operator.
- See the important note and rating located on the back of the unit.
- WARNING - This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near the equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain, or moisture.
- CAUTION - Danger of explosion or fire if batteries are mistreated. Replace only with the same or specified type.
- Do not leave the batteries exposed to direct sunlight for a long period of time with doors and windows closed. Do not disassemble the batteries or dispose of it in fire.
- Where the MAINS plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of not isolated dangerous voltage within the product that may be sufficient magnitude to constitute a risk of shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.



Warning: This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

TABLE OF CONTENTS

- Package Contents 4
- Controls & Connections 5
- First-Time Setup 8
- Using the Remote 15
- Connecting with HDMI 16
- LED Indicators 18
- Programming the Sound Bar 21
- Using Button Combinations 22
- Bluetooth Pairing 23
- Using Bluetooth Mode 24
- Re-Linking the Subwoofer with the Sound Bar 25
- Advanced Setup 26
- Advanced Setup - HDMI 27
- Wall-Mounting the Sound Bar 28
- Wall-Mounting the Satellite Speakers 30
- Help & Troubleshooting 33
- One-Year Limited Warranty 34
- Legal & Compliance 35

PACKAGE CONTENTS



High Definition
Sound Bar



Wireless
Subwoofer



2 x Satellite
Speakers



Remote Control
with Batteries



Stereo RCA to
3.5mm Audio Cable



2 x Power
Cables



Coaxial Audio
Cable



Digital Optical
Cable



HDMI Cable




2 x Wall
Mount Brackets
(Satellite Speakers)




2 x Wall
Mount Brackets
(Sound Bar)



2 x Wall
Mount Screws



4 x Velcro
Cable Ties



Wall Mount
Template





2 x Satellite
Speaker Audio
Cables



Quick Start Guides
(1 x English, 1 x
French-Spanish)

CONTROLS & CONNECTIONS

Back of Sound Bar

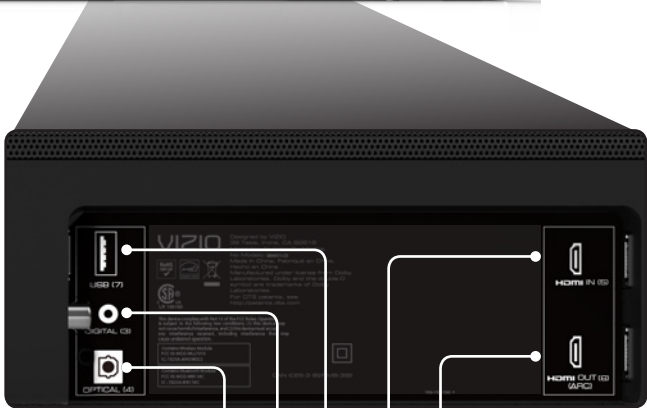

Power Port

AUX (1)
Analog Audio In
(Stereo RCA)

AUX (2)
Analog Audio In
(Stereo 3.5mm)

OPTICAL (4)
Digital Optical
Audio In



DIGITAL (3)
Coaxial In

USB* (7)
USB In

HDMI OUT (6)
HDMI Out
(ARC)

HDMI IN (5)
HDMI IN

* Supports .WAV file format playback only.

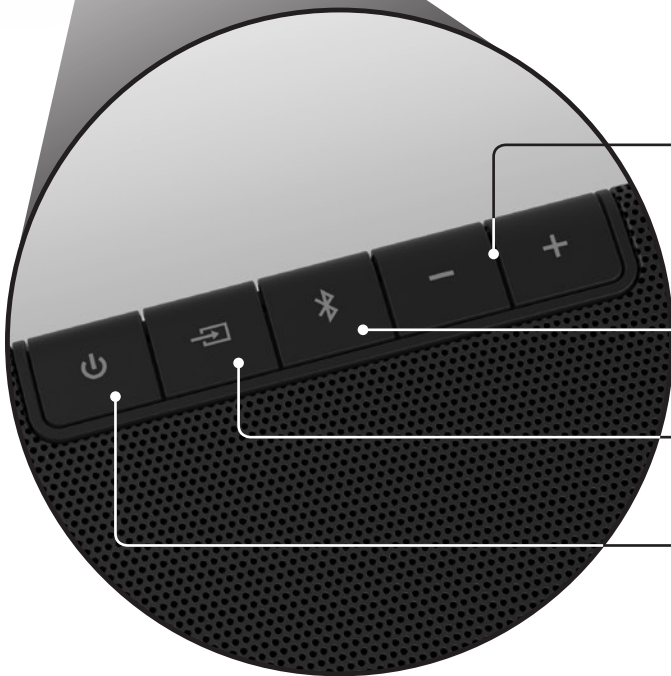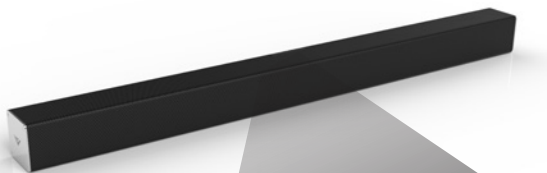

Volume Increase or decrease the loudness of the audio.


Bluetooth Input Hold to pair.
(See 'Bluetooth Pairing' for more information.)

Input Press to change the audio source.

Power Press to turn soundbar on or off.

Top of Sound Bar

Back of Subwoofer

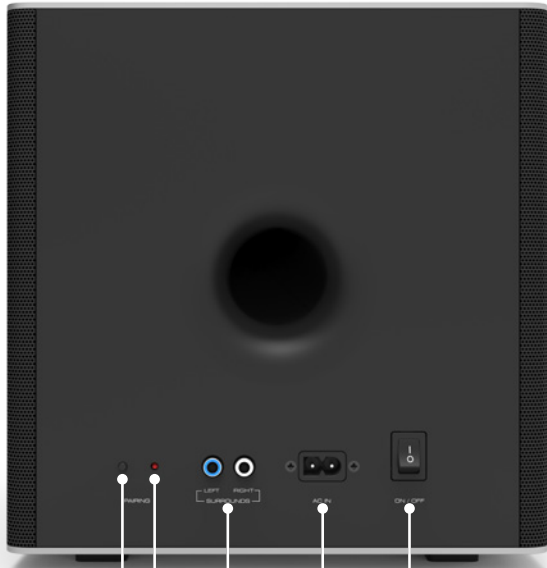

- Pairing Button
- LED Indicator
- Satellite Speaker Ports
(Connects to Satellite Speakers)
- Power Port
- Power Switch

Back of Satellite Speaker





- Satellite Speaker Port
(Connects to Subwoofer)

FIRST-TIME SETUP

1

Back of Sound Bar

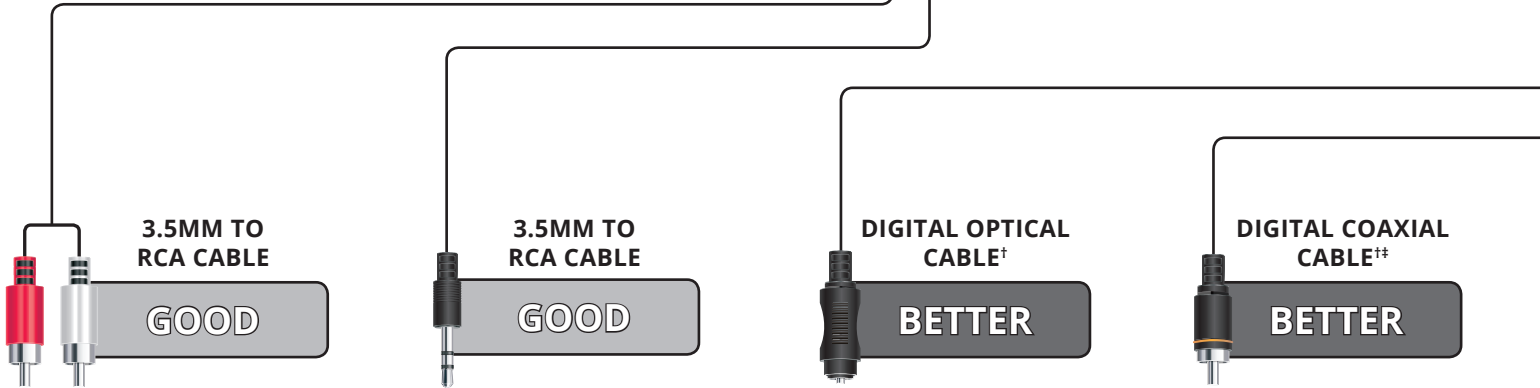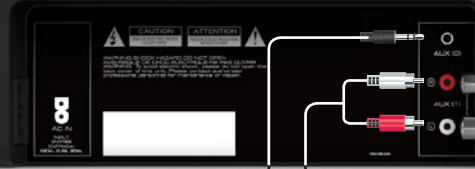

3.5MM TO
RCA CABLE

GOOD

3.5MM TO
RCA CABLE

GOOD

DIGITAL OPTICAL
CABLE[†]

BETTER

DIGITAL COAXIAL
CABLE^{†‡}

BETTER

CHOOSE ONE CABLE

GOOD

OR

BETTER

OR

BEST


AND CONNECT
IT TO YOUR TV




* Not all TVs have the audio outputs shown above. To connect the Sound Bar directly to your other devices (Blu-Ray player, game system, etc.) see your device's user manual.

† When using either of the Digital Inputs, if there is no audio: (A) try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.

‡ Cable not included.

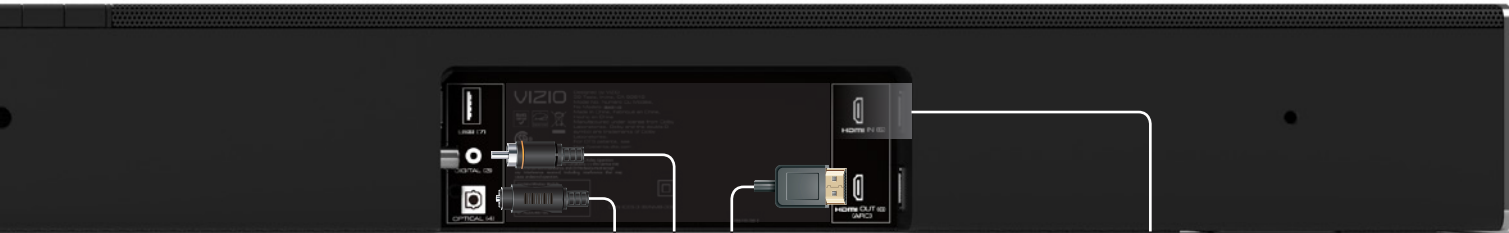

Do not use HDMI IN for First-Time Setup. See Advanced Setup if you would like to connect HDMI devices (such as Blu-ray™ players, cable boxes, and game consoles) to your Sound Bar.

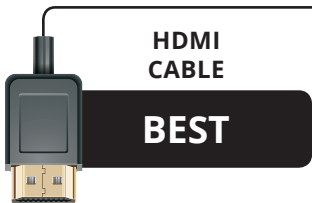


HDMI cables send Video (Out) and receive Audio from the TV. See the *Connecting with HDMI* section for more information.

Connect the **Sound Bar** to your **TV*** using **one** of the connection types to the left. Choose the best possible connection type. Be sure the TV port is an audio output, not an audio input.

† When using the Digital Inputs, if there is no audio: (A) try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.

* Not all TVs have the audio outputs shown above. To connect the Sound Bar directly to your other devices (Blu-ray player, game system, etc) see your device's user manual.

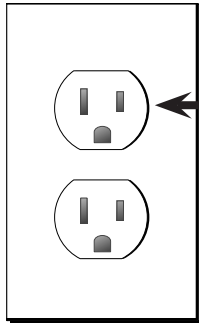


2 Connect the power cable to the Sound Bar **AC IN** as shown.

Plug the power cable into an electrical outlet.


- 3** Connect the satellite speakers to the subwoofer using the included satellite speaker audio cables.




Match the color coded speaker cable to the matching speaker port color.

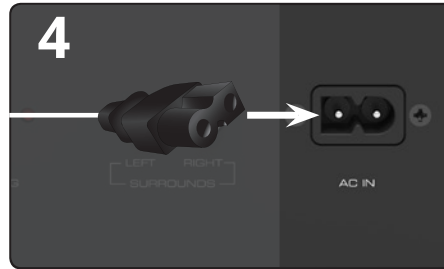

Connect a power cable to the subwoofer.

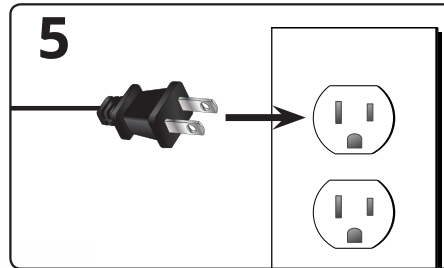

Plug the power cable into a power outlet.

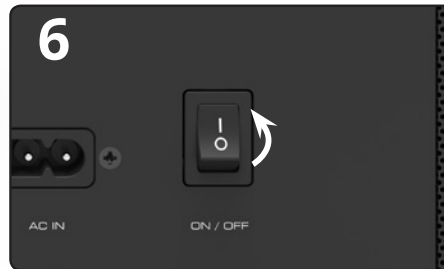


Flip the power switch into the **ON** position.

- 7** For the best surround sound experience, position the Sound Bar, subwoofer, and satellite speakers as shown. The Sound Bar should be close to ear level.



Sound Bar is centered
below the TV.

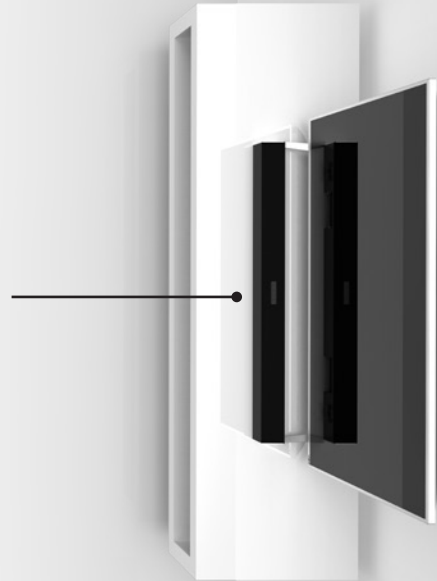

8



Remove the battery cover by gently sliding it away from the remote.

9



Insert the included batteries and gently slide the battery cover back into place.

10

Turn your TV on, the Sound Bar will automatically turn on and begin searching for an active input.


The LED indicators on the front of the Sound Bar will begin cycling in pairs through inputs until an audio source is detected.*



Tip: Pressing the **INPUT** button will stop the auto detect function.


You can press the **INPUT** button to switch between audio sources. For example, if you connected your TV to Input 1, set the Sound Bar to Input 1.

Input ——— Input ——— Power

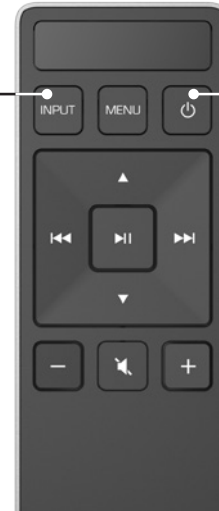

* Auto detect function only occurs once when the Sound Bar is first powered on. To enable this feature again, you must do a Factory Reset or by pressing and holding the **Input** button for 5 seconds.

USING THE REMOTE

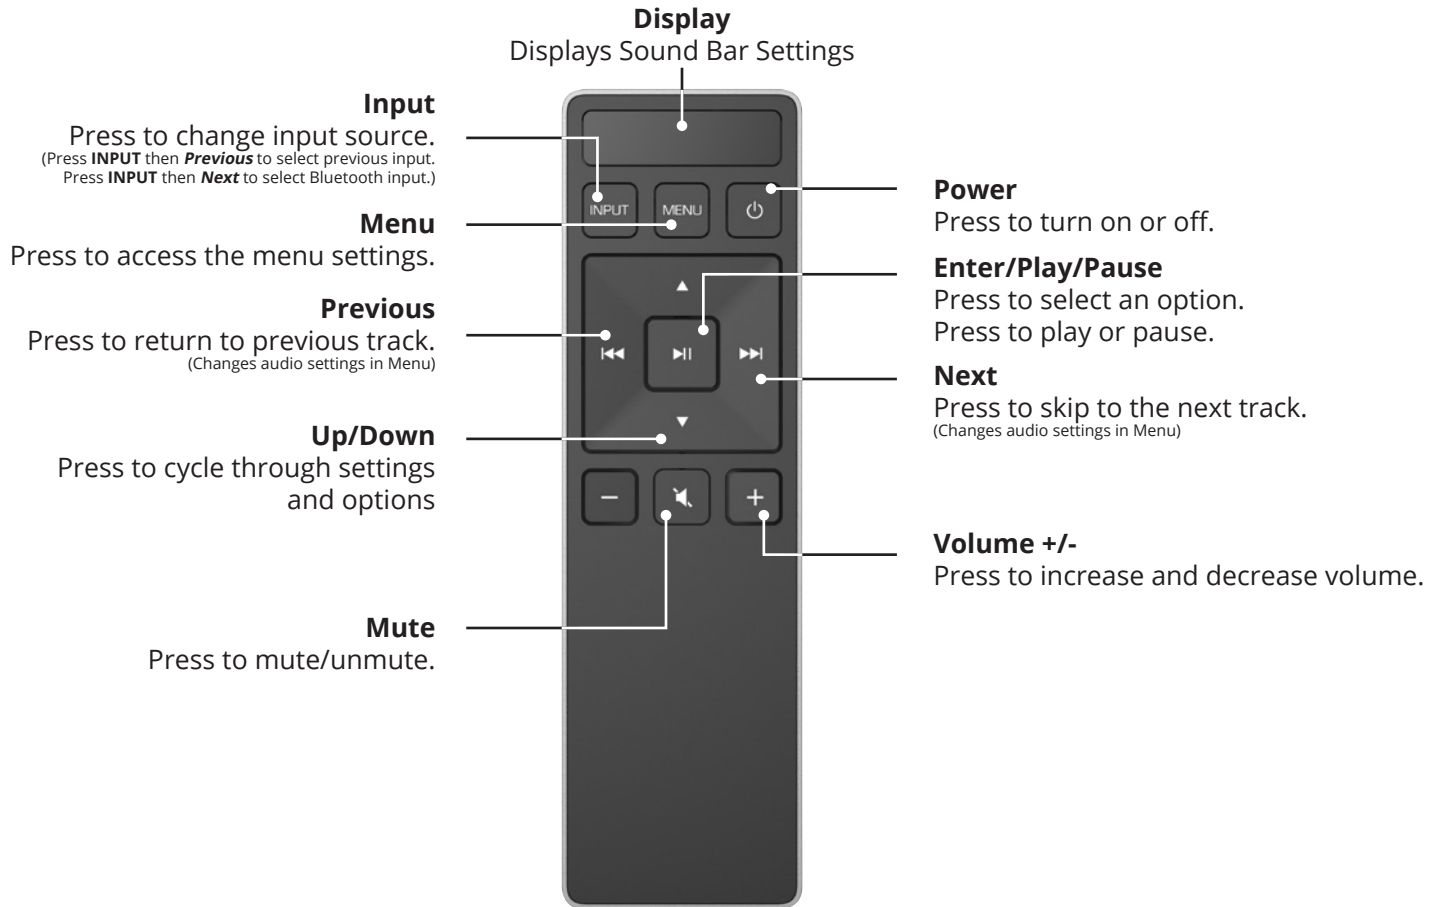

* Press and hold the INPUT button for 5 seconds to activate the input auto detect function.

CONNECTING WITH HDMI

What is HDMI Audio Return Channel (ARC)?

Using HDMI ARC, your TV can send audio to the sound bar using an HDMI cable.

You will need to connect your sound bar to your TV's HDMI ARC port using an HDMI cable that is ARC compatible.

To connect using HDMI*:

1. Connect one end of the HDMI cable to the **HDMI 1 (ARC)** port on the back of your TV.
2. Connect the other end to the **HDMI OUT (ARC)** port on your VIZIO sound bar.
3. From the AUDIO menu on your TV, change the Digital Audio Setting to Dolby Digital or Bitstream.
4. From the SYSTEM menu, enable CEC and ARC (SAC)[†] functions.
5. From the CEC menu, select **Device Discovery** to register the sound bar with the TV.




If you want to use the volume buttons on the TV remote control to control the sound bar, enable System Audio Control from the CEC menu.

* The following steps are for use with a VIZIO TV, steps may differ by TV manufacturer. See your TV's user manual for more information.

[†] CEC Function naming may differ by TV manufacturer. See your TV's user manual for more information.



Connect to HDMI (ARC) port on your TV

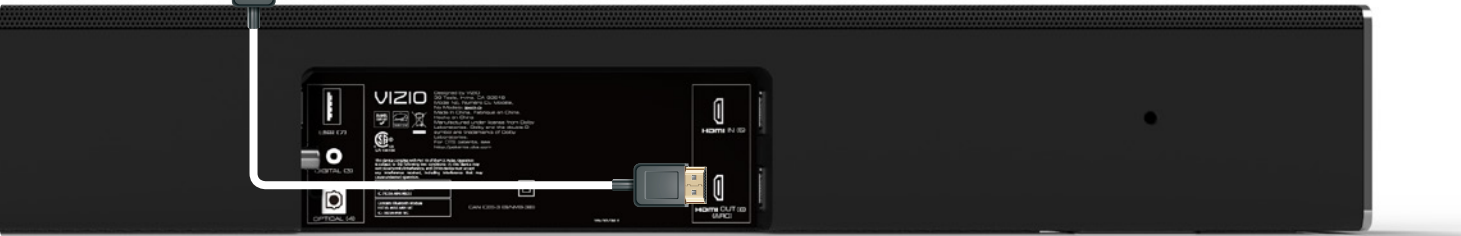






* HDMI ARC port location may differ by TV manufacturer. See your TV's user manual for more information.

LED INDICATORS






LED Indicators are located here.

Press the **Menu** button and use the **Up/Down Arrow** buttons on the remote to access the different functions and acoustic settings of the Sound Bar. Each function and setting will be displayed on the remote control's LCD display. The LED Indicators will behave differently with each function.




Function	LED Behavior	Description
Bluetooth Pairing BT Pair	 <p>(When searching for device) Flash from Bottom to Top and back continuously.</p>	<p>Press the Enter button on the remote. The Sound Bar will be discoverable for 15 minutes. You can now search for the Sound Bar (VIZIO SB4051) using your Bluetooth Device. The sound bar will power down if no device is found.</p> <p>Note: Set your Bluetooth device into pairing mode prior to the Sound Bar.</p>
Bass Levels Bass	 <p>Two center LEDs indicate Bass level 0.</p>	<p>Press the Next/Previous button to increase/decrease the bass level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.</p>
Treble Levels Treble	 <p>Two center LEDs indicate Treble level 0.</p>	<p>Press the Next/Previous button to increase/decrease the treble level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.</p>
Center Levels Center	 <p>Two center LEDs indicate Dialogue is centered.</p>	<p>Press the Next/Previous button to increase/decrease the presence of dialog in the center channel. The LED indicators will move to the top when the dialog presence is increased and to the bottom when the dialog presence is decreased.</p>
Surround Levels Surround	 <p>Two center LEDs indicate Surround is centered.</p>	<p>Press the Next/Previous button to increase/decrease the surround sound level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.</p> <p>Note: DTS TruSurround must be On to adjust the surround level.</p>

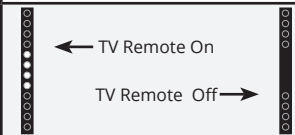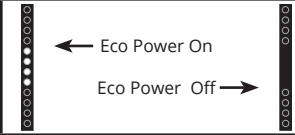Function	LED Behavior	Description
Surround Balance Surr Bal	Two center LEDs indicate Surround Balance is centered.	Press the Next/Previous button to increase/decrease the surround balance level on each side. The LED indicators will move to the top with balance levels to the right and down with balance levels to the left.
Subwoofer Levels Subwoofer	Two center LEDs indicate Subwoofer level 0.	Press the Next/Previous button to increase/decrease the level of the subwoofer. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.
Surround On/Off Surnd	← Surround On Surround Off →	Press the Next/Previous button to enable/disable surround sound. When enabled (On), all inputs will produce 5.1 surround sound. When disabled (Off), the satellite speakers will be disabled.
DTS TruVolume On/Off TruVol	← TruVolume On TruVolume Off →	Press the Next/Previous button to enable/disable TruVolume. When enabled (On), TruVolume provides a consistent and comfortable volume level for a more enjoyable listening experience.
Night Mode On/Off Night	← Night Mode On Night Mode Off →	Press the Next/Previous button to enable/disable Night Mode. When enabled (On), the Sound Bar will lower bass frequency levels to provide a more quiet environment (ideal for apartment living and homes with sleeping children).
AV Delay AV Delay	LED at the bottom indicates no delay.	Press the Next/Previous button to increase/decrease the amount of audio delay. The LED indicators will move to the top with increasing audio delay levels.
Speaker Test Spkr Test	—	Press the Play/Pause button to activate the speaker test function. A voice will begin calling out each speaker beginning with <i>left front</i> . (Left Front, Center, Right Front, Right Rear, Left Rear, and Subwoofer-white noise) If any of these are missing, check the connection and run the speaker test function again.


Function	LED Behavior	Description
TV Remote VZtv Rmt On	 <p>← TV Remote On</p> <p>TV Remote Off →</p>	Press the Next/Previous button to enable/disable VIZIO TV Remotes. When enabled (On), you can use a VIZIO TV remote control to turn on the Sound Bar (using the TV Volume Up button) and control volume.
Eco Power On/Off EcoPwr On	 <p>← Eco Power On</p> <p>Eco Power Off →</p>	Press the Next/Previous button to enable/disable Eco Power Mode. When enabled (On), the Sound Bar will go into standby after a period of inactivity. The sound bar will automatically turn off when no audio signal is detected. Off disables this feature. Note: Enable this function if using a TV remote to control the sound bar.
Program Remote Prg Remote	--	Press the Next/Previous and Play buttons to toggle and select and program your TV remote to control the Volume Down , Volume Up , and Mute functions on your Sound Bar. See the <i>Program Remote</i> section for more information.
Reset Reset No	--	Press the Next/Previous and Play buttons to select and reset your remote and Sound Bar to the factory default settings. All paired Bluetooth devices will be unpaired. All programmed IR remotes will also be removed. See the <i>Reset to Factory Default Settings</i> section for more information.
When a Dolby Digital or DTS signal is detected.	 <p>Dolby Digital and DTS Indicator LED</p>	Dolby Digital and DTS are only available on either the Coaxial In or Digital Optical Audio In inputs. When a Dolby Digital or DTS signal is detected, the Dolby Digital (White) / DTS (Blue) indicator LED will light up for 5 seconds before fading away.

PROGRAMMING THE SOUND BAR

You can program your Sound Bar to accept TV remote IR commands. Press the Menu button on the remote, then use the Up/Down buttons to navigate to Prg Remote. Use the Next/Previous buttons to toggle through Learn Vol -, Learn Vol +, and Learn Mute.

Function	LED Behavior	Description
Learn Volume Down Learn Vol-	 (Waiting to learn) Flash from bottom to top and back continuously.	Press the Play button to put the Sound Bar into learning mode. While the Sound Bar is in learning mode, press the Volume Down button on the TV remote control. All of the LED Indicators on the Sound Bar will flash two times indicating that it has successfully recognized the TV remote.
Learn Volume Up Learn Vol+		Press the Play button to put the Sound Bar into learning mode. While the Sound Bar is in learning mode, press the Volume Up button on the TV remote control. All of the LED Indicators on the Sound Bar will flash two times indicating that it has successfully recognized the TV remote.
Learn Mute Learn Mute	 All of the LEDs will blink twice to confirm.	Press the Play button to put the Sound Bar into learning mode. While the Sound Bar is in learning mode, press the Mute button on the TV remote control. All of the LED Indicators on the Sound Bar will flash two times indicating that it has successfully recognized the TV remote.



 Turn off your TV speakers when programming your sound bar.


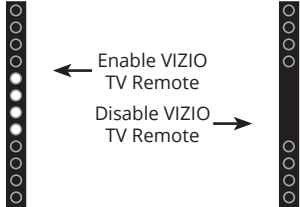
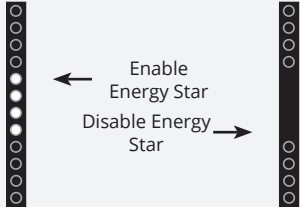


Point both the sound bar and TV remotes towards the front of the sound bar when programming.

USING BUTTON COMBINATIONS


Buttons are located here.

There are 3 functions that are triggered by 3 different button combinations on the Sound Bar.

Function	LED Behavior	Description
Factory Reset	 <p>All 12 LEDs will flash 3 times</p>	<p>Reset the Sound Bar to the factory default settings. To perform a Factory Reset, Press and Hold the Bluetooth (⌘) and Volume Down (—) buttons for 5 seconds.</p> <p>Note: This will erase all settings and preferences that you have set.</p>
VIZIO TV Remote Control	 <p>← Enable VIZIO TV Remote Disable VIZIO TV Remote →</p>	<p>Enable/disable the use of a VIZIO TV remote control to power on and adjust the volume of the sound bar. To enable/disable this function, Press and Hold the Power (⏻) and Volume Up (+) buttons for 5 seconds.</p>
Energy Star	 <p>← Enable Energy Star Disable Energy Star →</p>	<p>When the Energy Star setting is enabled, the sound bar will automatically power down after a period of inactivity. When disabled, the sound bar will remain powered on until you turn it off. To enable/disable this function, Press and Hold the Power (⏻) and Volume Down (—) buttons for 5 seconds.</p> <p>Note: Energy Star setting is enabled by default.</p>

BLUETOOTH PAIRING

To pair the Sound Bar with a Bluetooth device:

1. Press and hold the **Bluetooth** button  on the Sound Bar for five (5) seconds or select the BT Pair option from the display remote menu. When the Sound Bar is in Bluetooth Pairing Mode, the LED Indicators on the Display Panel on the front of the Sound Bar will light sequentially from bottom to top and back again.

Once the device is paired, the LED Indicators will stop flashing.

2. You can now search for the Sound Bar (VIZIO SB4051) using your Bluetooth device. For more information, refer to the user documentation that came with the device.
3. Play audio from your Bluetooth device. Volume can be controlled on your source device and the Sound Bar.



Bluetooth Device



Top of Sound Bar

USING BLUETOOTH MODE

Your Sound Bar supports music streaming from smartphones, tablets, and computers with Bluetooth capability. Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the Sound Bar, as long as you stay within range of the Sound Bar, your device should remain paired. If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.



Your Sound Bar is not equipped with a microphone, so it cannot operate as a hands-free device for a smartphone.

Maximizing Signal

A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.

Try the following if your sound quality is less than optimal:

- If you hear any break-up or disconnect while streaming music from your device, move the source device closer to the Sound Bar.
- Be sure that there are no solid obstructions in the line-of-sight between the Sound Bar and the source device.
- Other wireless devices can affect Bluetooth range, including wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens. Turning off or moving these devices may improve Bluetooth range.



Reduce the volume levels on your device and on the Sound Bar before pressing Play. High volume levels can damage your hearing.

RE-LINKING THE SUBWOOFER WITH THE SOUND BAR



The subwoofer has already been paired with the sound bar by VIZIO. However, they may need to be re-link if there is no sound coming from the subwoofer.



Turn off your TV speakers when programming your sound bar.

1



First confirm that the power switch is in the **ON** position. **Press and hold** the pairing button on the back of the subwoofer for 5 seconds. The LED on the back of the subwoofer will begin to blink.

2




Top of Sound Bar

Press and hold the **power** button on the top of the sound bar for 5 seconds. The LED indicators on the front will flash 3 times. The subwoofer is now linked with the sound bar.


ADVANCED SETUP

Back of Sound Bar

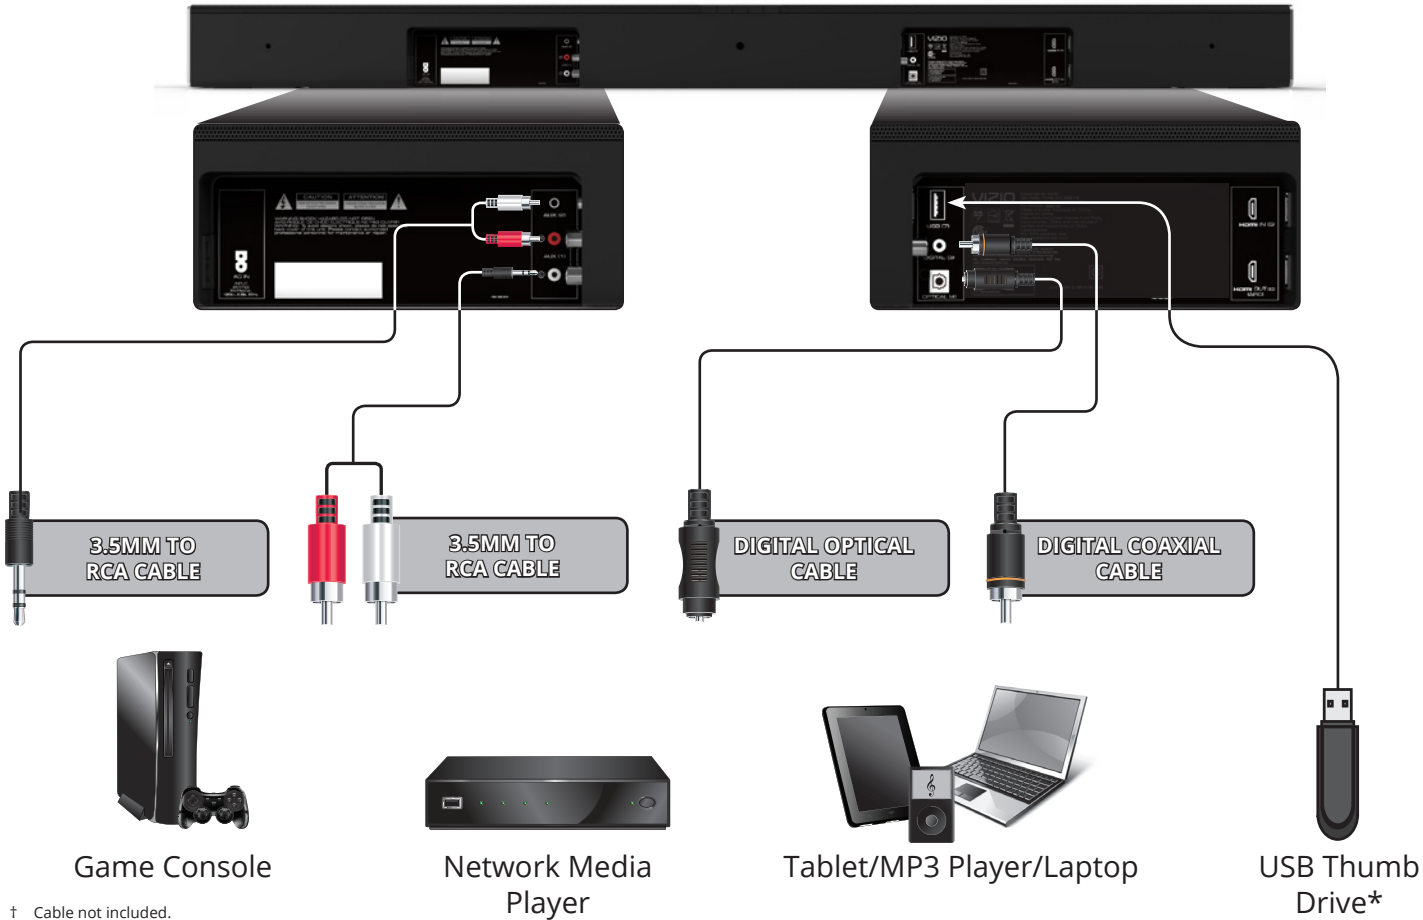

† Cable not included.
* Supports .WAV file format playback only.

ADVANCED SETUP - HDMI

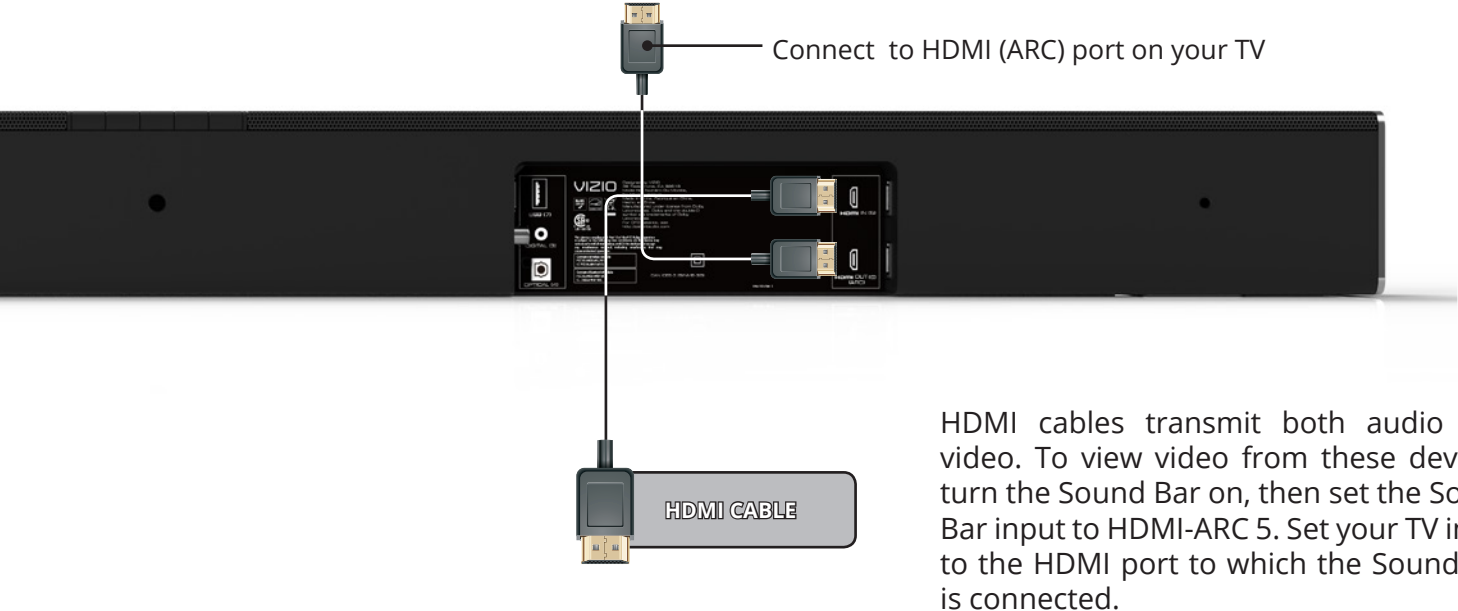

Blu-ray Player

OR



Cable/Satellite Box

* Cables appearance may differ from the ones supplied.


WALL-MOUNTING THE SOUND BAR

1



Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a Phillips screwdriver.

2

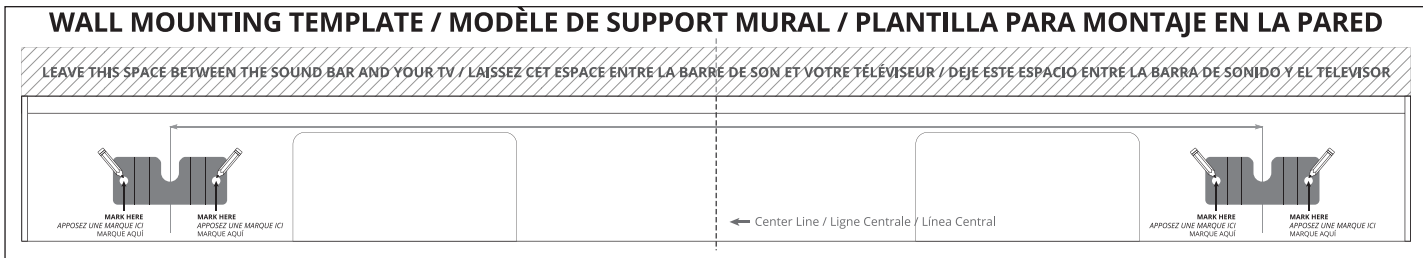


Place the included wall mounting template against the wall under your TV. Mark the four bracket holes using a pencil.

3

Be sure your screws are attached to wood studs, drywall anchors (for drywall), or concrete anchors (for brick/concrete walls).

Screws for attaching the brackets to the wall are not included. Choose the screw type and length appropriate to your home's construction. If in doubt, consult a professional installer.

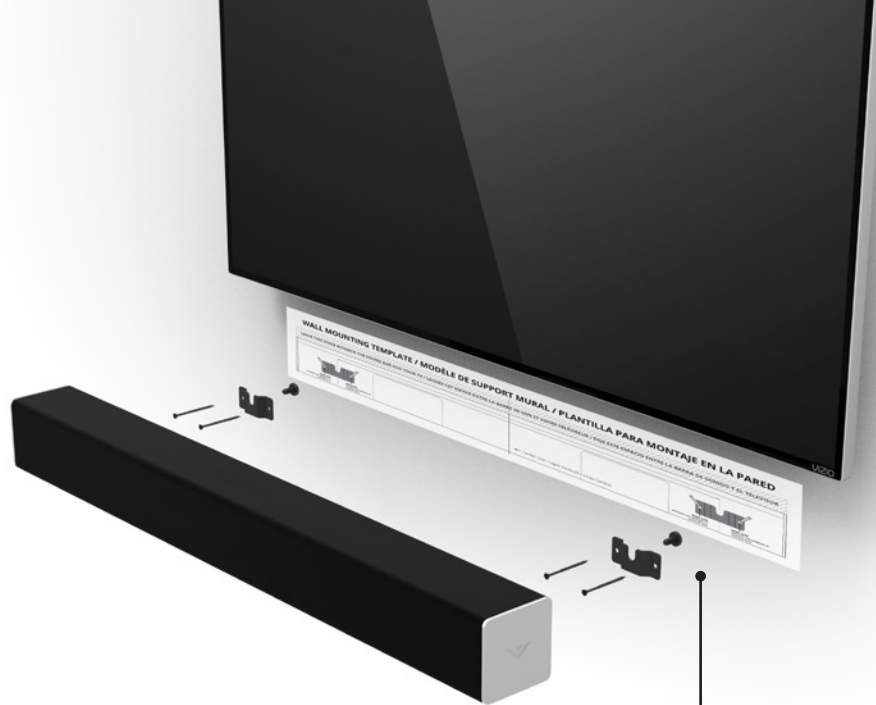

Wall Mount Screw

Screw Size: M4 x 10



If you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home, consult a professional installer.

WALL-MOUNTING THE SATELLITE SPEAKERS


To wall-mount the satellite speakers:

1. Attach the wall mount screw to the back of the satellite speaker.
2. Attach the wall mount to the back of the satellite speaker.
3. Align and mount the satellite speaker with the wall mount bracket.

Be sure your screws are attached to wood studs or drywall anchors (for drywall) or concrete anchors (for brick/concrete walls). Wall mounting hardware is not included.



If you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home, consult a professional installer.

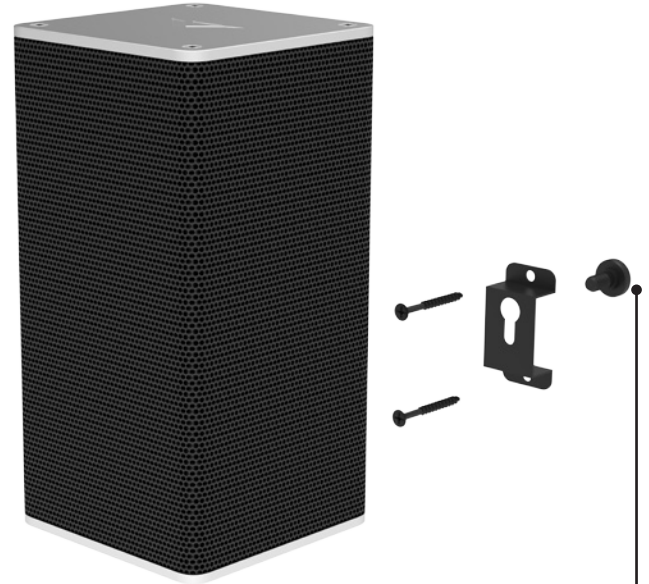

Wall Mount Screw

Do You Have Questions? Find Answers At

SUPPORT.VIZIO.COM

Find help with:

- New Product Setup
- Connecting Your Devices
- Technical Problems
- Product Updates
- And More



**Live Chat
Support Available**

You can also contact our
award-winning support team at:

Phone: (877) 878-4946 (TOLL-FREE)

Email: techsupport@VIZIO.com

Hours Of Operation:

Monday - Friday: 7 AM TO 11 PM (CST)

Saturday - Sunday: 9 AM TO 6 PM (CST)



Take A Moment To Register Your Product At

VIZIO.COM/PRODUCT-REGISTRATION

Why Register?



Customized Support

Get assistance quickly with your information on-hand.



News & Offers

Take advantage of the latest news and special offers from VIZIO.



Safety & Satisfaction

Stay up to date with important product updates and notifications.

REGISTER YOUR VIZIO PRODUCT NOW

HELP & TROUBLESHOOTING

There is no power.

- Press the **POWER** button on the remote control or on the top of your Sound Bar.
 - Ensure the power cord is securely connected.
 - Plug a different device into the electrical outlet to verify that the outlet is working correctly.
-

There is no sound.

- Increase the volume. Press **Volume Up** on the remote control or on the top of your Sound Bar.
 - Press **MUTE** on the remote to ensure the Sound Bar is not muted.
 - Press **INPUT** on the remote or on the top of your Sound Bar to select a different input source.
 - When using either of the Digital Inputs, if there is no audio: (A) Try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.
 - On digital inputs, the input LEDs will flash rapidly if an unsupported format is present. Set the source to output PCM.
 - Your TV may be set to variable audio output. Confirm that the audio output setting is set to **FIXED** or **STANDARD**, not **VARIABLE**. Consult your TV's user manual for more detailed information.
 - If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.
-

I hear buzzing or humming.

- Ensure all cables and wires are securely connected.
 - Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
 - Connect your device to a different input on the Sound Bar.
-

The remote isn't working.

- Replace the remote batteries with new ones.
- Point the remote directly at the center of the Sound Bar when pressing a button.
- If using a Bluetooth connection, some of the buttons on the remote may not be supported by the streaming application. (e.g., Pandora doesn't support the Back button.)

ONE-YEAR LIMITED WARRANTY

ON PARTS AND LABOR

Covers units purchased as new in United States and Puerto Rico Only

VIZIO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this warranty is determined to be defective within the warranty period, VIZIO will either repair or replace the Product at its sole option and discretion. To obtain warranty service, contact VIZIO Technical Support via email: TechSupport@VIZIO.com or via phone at 877 MY VIZIO (877.698.4946) from 7:00AM to 11:00PM Monday through Friday and 9:00AM to 6:00PM Saturday and Sunday, Central Time, or visit www.VIZIO.com. PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER. Proof of purchase in the form of a purchase receipt or copy thereof is required to show that a Product is within the warranty period.

Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and Products may be new or recertified at VIZIO's option and sole discretion. Replacement parts and Products are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

Type of Service

Defective Products must be sent to a VIZIO service center to obtain warranty service. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY PRODUCT TO A VIZIO SERVICE CENTER FOR WARRANTY SERVICE.

Product returns to VIZIO's service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection. VIZIO Technical Support will provide instructions for packing and shipping the covered Product to the VIZIO service center.

Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover, for example: cosmetic damage, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a VIZIO authorized service center. Products with unreadable or removed serial numbers, or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING VIZIO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

CHECK www.VIZIO.com FOR THE MOST CURRENT VERSION.

Specifications

Sound Bar: Two 2.75" Full-Range Transducers (Left and Right)
One 2.75" Full-Range Transducer (Center)

Satellite: One 2.5" High-Efficiency Full-Range Transducer (Each Satellite)

Subwoofer: One 6" Subwoofer Driver

Inputs: One 3.5mm Stereo Audio
One RCA Stereo Audio
One Optical (Toslink)
One Digital Coaxial Audio
One HDMI (ARC on output HDMI)
One USB (Supports .WAV format only)
Bluetooth (Wireless)

Sound Pressure Level (System): 102 dB

Frequency Response (System): 50 Hz - 20 KHz

Voltage: 120 VAC, 60 Hz

Compliances: cCSAus, FCC, CAN ICES-3

LEGAL & COMPLIANCE

FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device for the band 5150-5250 MHz is only for indoor usage to reduce potential for harmful interference to co-channel mobile satellite system."

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

RF Exposure Information

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC Statement

1. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
 - (1) this device may not cause interference, and
 - (2) this device must accept any interference, including interference that may cause undesired operation of the device.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Radiation Exposure Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Disposal and Recycling

You must dispose of this product properly, according to local laws and regulations. Because this product contains electronic components and a battery, it must be disposed of separately from household waste. Contact local authorities to learn about disposal and recycling options.

Other:

Image(s) used under license from Shutterstock.com



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruVolume is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Studio Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Circle Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



© 2014 CSR plc and its group companies. The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.



This product qualifies for ENERGY STAR in the "factory default" setting and this is the setting in which power savings will be achieved. Changing the factory default settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR rating.

We want to help you save energy.

